


Restart TV

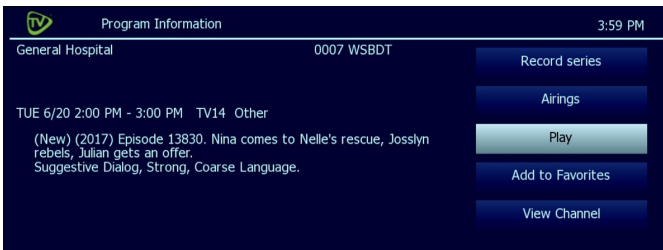

The **Restart TV** feature allows you to view programming that has already aired.

To view past programming

1. Bring up the **channel guide** or **HD channels guide**
2. Use the *arrow* buttons to navigate left in the timeline up to 3 hours back. This will show programming that has already played
3. Highlight a program in a previous time slot and press *OK* to select that program
4. Highlight **Play** and press *OK*
5. **To restart a program currently playing, select the program and press *Info* to bring up the Play option**

Your program will then play from the beginning. At the end of a Restart TV playback, you will be presented with the option to watch the next program in sequence or to return to real-time programming or to move to the Remote Storage DVR



To leave Restart TV playback:

Press the Blue Button on your remote control to return to real-time programming (this will take you to the guide, and you can navigate to the channel you want to watch) **OR**

Press the *exit*, *delete recording*, or *restart button* and then arrow to the Exit option.

